


SALES DRAWING ONLY
NOT TO BE USED FOR MANUFACTURE

NOTE:
If using valves with raised face flanges then do NOT over tighten as this can deform the sensor flange causing the sensor output to change or damage the sensor beyond repair.

PSM would recommend using valves with flat flange faces.

NOTE:
Valve Should be in the Open Position & Tank Empty When Sensor is Being Installed & Zero Checked

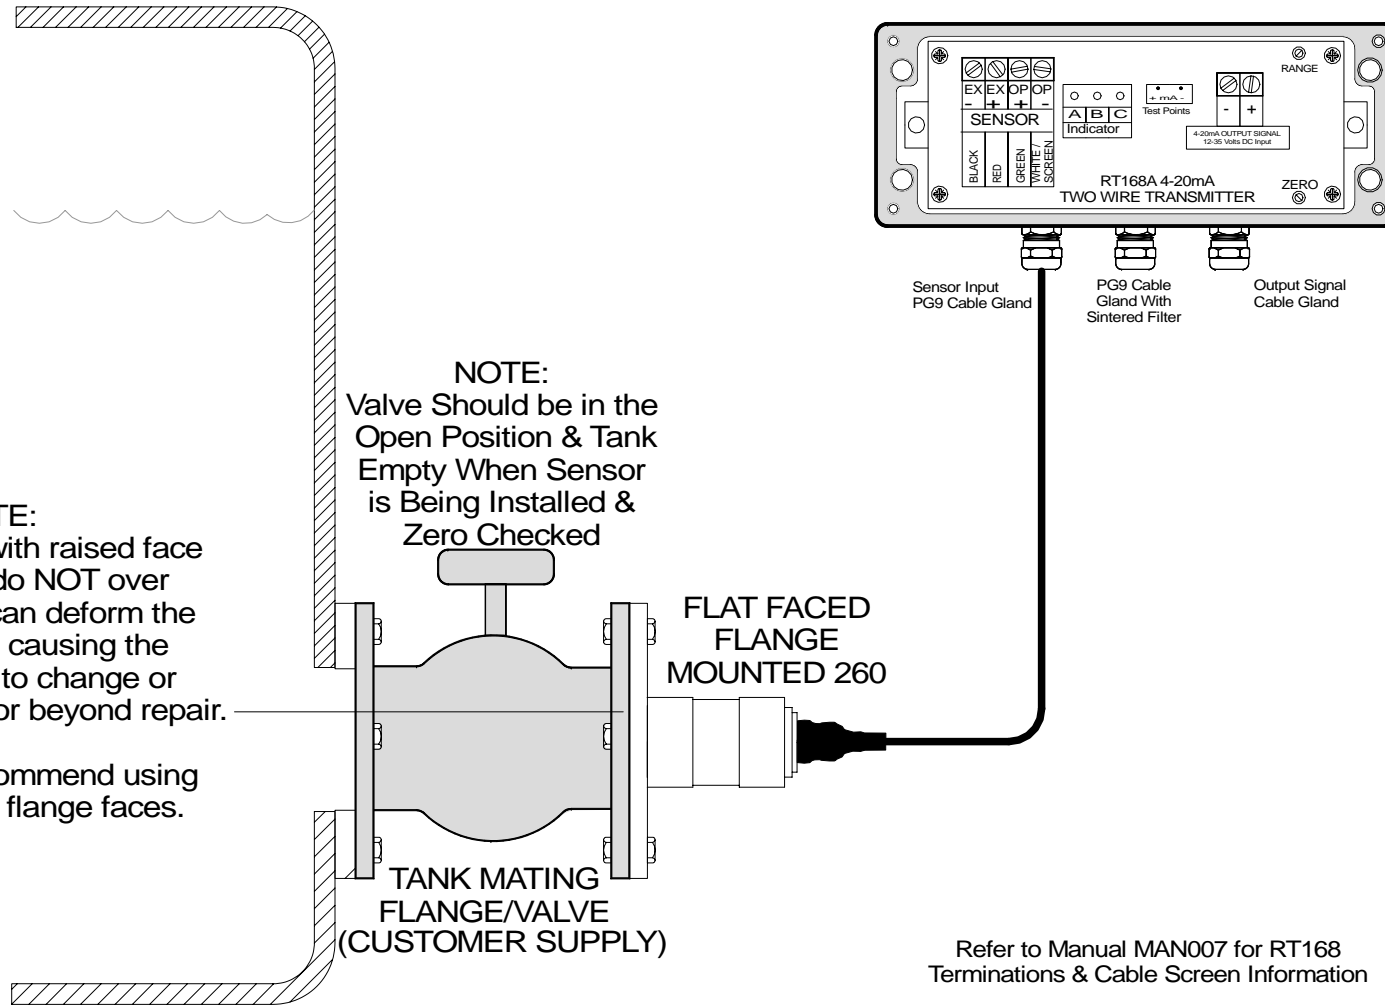

Refer to Manual MAN007 for RT168 Terminations & Cable Screen Information

ISSUE	A
DATE	19-02-13
DCR	
DRAWN	SAL
CHECKED	

PSM Instrumentation Ltd

Haywards Heath, West Sussex RH16 1TW
ph: 44 (0) 1444 410040 f: 44 (0) 1444 410121
<http://www.psmmarine.com>

SCALE
NTS

UNLESS OTHERWISE STATED DIMENSIONS ARE IN
MILLIMETRES / INCHES

TITLE
260 Flange Installation

DRAWING NO
S-001378-260-IN

A4 SHT 1 OF 1